

M200 Installation Instructions




**Requires at least 2 people for installation*

***** Please watch out for pinch points *****

- Remove tailgate of vehicle.
- Insert two cylinders into the holes on each side of the bottom of the ramp. **see figure 1*
- Remove existing bolts from the two sides of the vehicle where tailgate was removed. **see figure 2*
- Lift the ramp to connect the cylinders inserted on each side of the ramp to the bottom part of the tailgate. **see figure 2*
- Bolt on the two black side brackets using bolts removed from previous step, ensuring that the U-Shape part of the bracket is towards the inside of the tailgate. **see figure 3*
- Attach spring from U-Shape part of bracket to connecting hole on the ramp edge, repeat for other side. **see figure 4*

***** For safety purposes *****

**DO NOT drive vehicle with ramp deployed.
Ensure ramp is locked in place when stowed before
moving vehicle.**

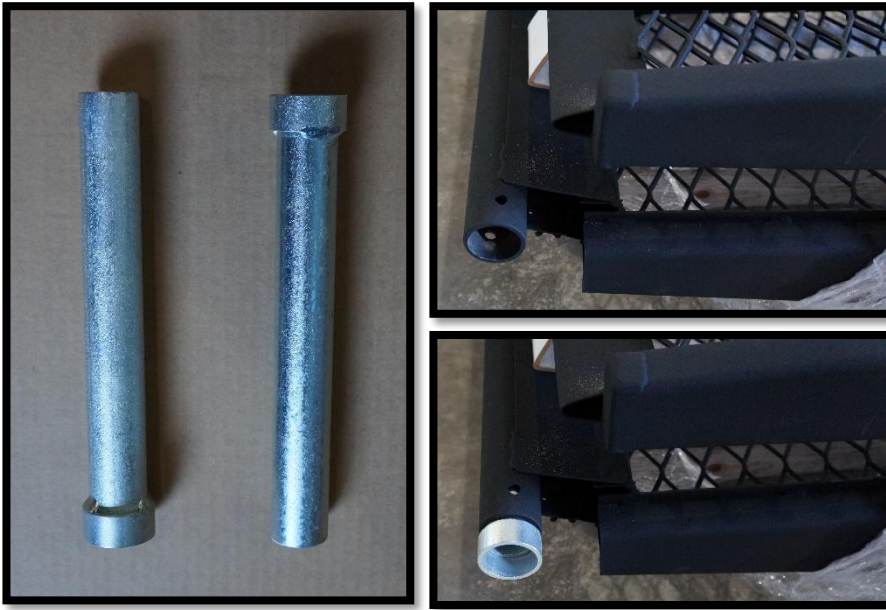

** figure 1*



** figure 2*



Handi-Ramp®
Since 1958

Visit our webpage at:
<http://www.handiramp.com>



** figure 3*



** figure 4*

Handi-Ramp[®]
Since 1958

Visit our webpage at:
<http://www.handiramp.com>