

Handi-Ramp 5600 99<sup>th</sup> Avenue Kenosha, WI 53144

Tel: (800) 876-7267 Fax: (847) 816-8866

# **Horse Mounting Ramp Installation Instructions**

Build the Platform First

### Platform Contents Include:

- 1 Platform
- 4 leg bases with 4 bolts each
- 4 legs with 1 bolt each
- 2 long braces with 2 bolts each
- 2 short braces with 2 bolts each

## Recommend using 2 people to build platform




#### **Platform Build Instructions**

- **Step 1**» Place platform underside up on a flat surface.
- Step 2» Place a leg base in a corner of the platform and attach using the included 4 bolts.
- (Note: Bolt is attached with smooth end visible on finished platform side).
- **Step 3**» Repeat Step 2 for the remaining 3 corners.
- **Step 4**» Attach individual leg to each base using included bolt.
- (Note: Platform should stand 30" when assembled so bolt leg in the top slot of leg base).
- Step 5» Repeat Step 4 for the remaining 3 legs.
- Step 6» Attach braces between each leg using included bolts.





#### **Platform Underside**

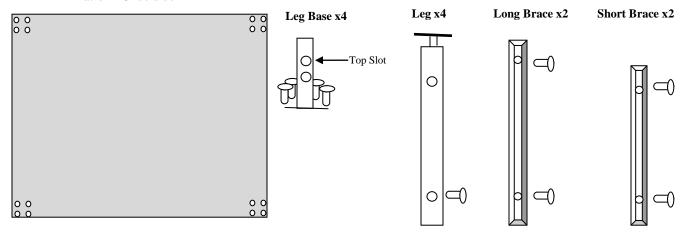




# Horse Mounting Ramp

#### Contents Include:

- 1 Finished Platform
- 1 Center Leg
- 2 Ramps Sections
- 6 sets of Handrails



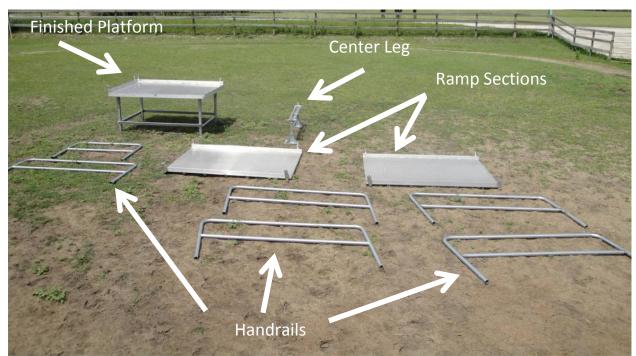

## **Horse Mounting Ramp Building Instructions**

- **Step 1**» Place finished platform in desired location.
- Step 2» Place center leg structure approximately 6 feet away from the platform.
- **Step 3**» Place the first ramp section in place using the tongue and grooves on the platform and the center legs structure.
- **Step 4**» Place the second ramp section onto the center leg structure using the tongue and grooves. (**Note**: the other side of the ramp will sit on the ground).
- **Step 5**» Place handrails into the attached cups.
- (**Note**: "Angled" handrails sections are to be attached to the ramp sections and the "90 degree" handrails are to be attached to the platform.)

